# 1. Package Contents

Thank you for purchasing PLANET Industrial IP67 1-port 10/100/1000T 802.3bt PoE++ to 2-port 10/100/1000T 802.3at Gigabit PoE Extender, IPOE-E302. In the following sections, the term **"Outdoor PoE Extender"** means the IPOE-E302.

Open the box of the Industrial Ethernet Switch and carefully unpack it. The box should contain the following items:



If any of these are missing or damaged, please contact your dealer immediately; if possible, retain the carton including the original packing material, and use them again to repack the product in case there is a need to return it to us for repair.

### 2. Hardware Introduction

This section describes the functionalities of the Outdoor PoE Extender's components

#### 2.1 Product Outlook

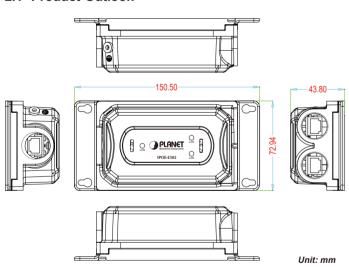


Figure 2-1: IPOE-E302 product outlook

# 2.2 802.3bt PoE++ Input Port

Figure 2-2 shows the PoE++ Input port side of the IPOE-E302




Figure 2-2: IPOE-E302 PoE++ Input port side

#### 2.3 802.3at PoE+ Output Port

Figure 2-3 shows the two PoE+ ouput ports side of the IPOE-E302.




Figure 2-3: IPOE-E302 PoE+ Output ports side

#### 2.4 LED Indicators

	LED	Color	Function
	LNK/ACT	Cunnu	<b>Lights</b> to indicate the port is linked up at 10/100/1000Mbps.
		Green	<b>Blinks</b> to indicate that the IPOE-E302 is actively sending or receiving data over that port.

### 3. Installation


This section describes how to install the Outdoor PoE Extender and make connections to it. Please read the following topics and perform the procedure in the order being presented.

### 3.1 Installing cable gland with RJ45 UTP cable

**Step 1:** Disassemble the **cable gland** as shown below:



Step 2: Slip the Ethernet cable through the clamping nut, sealing insert and gland body. Tighten the clamping nut and the body to the sealing insert to make the three parts into one complete cable gland.

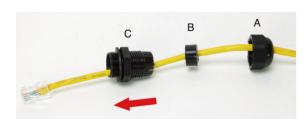

# 3.2 Connecting Waterproof Cable Kit to the Outdoor PoE Extender

Step 1: Insert the RJ45 connector into the connector of PoE++ In port.



**Step 2:** Turn clockwise to tighten the **gland body** with the Outdoor PoE Extender.

Step 3: Insert the sealing insert into the cable gland body.



**Step 4:** Attach the **clamping nut** to the cable gland to complete the cable assembly.





Make sure the clamping nut is tightly attached to the cable gland body and the sealing insert is squeezed tightly




Step 5: Repeat Steps 1 to 4 for two PoE+ Out ports





1. Use only the waterproof cable gland provided in the package of the IPOE-E302.

If the above installation procedure is not properly followed, the warranty will be invalidated.

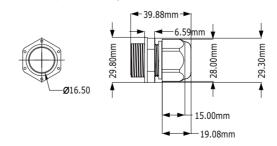


- If the waterproof cable gland is found missing or damage, please contact your local reseller where you purchased from.
- Never use any waterproof cable gland that is not purchased from PLANET or doesn't have the same dimensions of the IPOE-E302; it will damage the device permanently.

#### 3.3 Wall-mount Installation

To install the Outdoor PoE Extender on the wall, please follow the instructions described below.

- **Step 1:** Find the wall that you want to mount the Outdoor PoE Extender on.
- Step 2: Refer to the picture below to screw the four screws on the wall

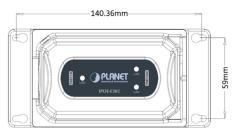


Step 3: Use a screwdriver to screw them into the wall.



# 3.4 Grounding the Device

Users **MUST** complete grounding wired with the device; otherwise, a sudden lightning could cause fatal damage to the device.






EMD (Lightning) DAMAGE IS NOT CONVERED UNDER WARRANTY.

#### 3.5 Connecting IPOE-E302 to PSE

The Outdoor PoE Extender has three RJ45 ports of which one is the **PoE++ In** port connected to the PSE and the other two are **PoE+ Out** ports connected to the PDs.

Step 1: Connect a standard Cat5e/6 UTP cable from a remote PSE, such as PoE switch, to the "PoE++ In" port of the IPOE-E302.



Step 2: The PSE delivers both Ethernet Data and PoE power over UTP cable to the IPOE-E302 and the "LAN" LED will be lit steadily.




- If the LED is not lit, please check the remote PSE or the cable connecting to a PC or a network device to see if the cable is correct. Or with an 802.3at device such as the target PD, check whether the power injection is correct.
- 2. Never connect any non-standard PoE PSE to the IPOE-E302; it will damage the device permanently.

-1- -3- -4-

#### 3.6 Connecting IPOE-E302 to PD

Step 1: Connect the additional Cat5e/6 cable from the PoE+ Out of the IPOE-E302 to a remote PD.

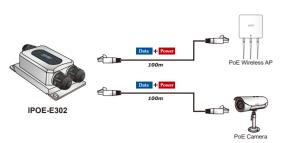

- Step 2: The PoE+ Out port is also the power injector which transmits DC voltage to the Cat5e/6 cable and transfer data and power simultaneously between the PSE and PD.
- **Step 3:** Once the IPOE-E302 detects the existence of an IEEE 802.3at/ af device or Ethernet device, the LAN LED indicator will be lit steadily, showing it is providing power.







- 1. According to IEEE 802.3at/af standard, the IPOE-E302 will not inject power to the cable if not connected to a standard IEEE 802.3at/af device.
- 2. DO NOT connect any non-standard PSE to PoE+ In port of the IPOE-E302, it may damage the device permanently.

# 4. Power over Ethernet Budget

The following table lists how many PoE devices can be powered by the IPOE-E302 under 1m distance:

Power Source	PoE Output Budget*	Max. Number of PDs su	pported
	60 watts max.	Class 4 PD@25.5 watts	2 units
IEEE 802.3bt PoE		Class 3 PD@12.9 watts	2 units
PSE		Class 2 PD@6.5 watts	2 units
		Class 1 PD@3.8 watts	2 units
	30 watts max.	Class 4 PD@25.5 watts	1 unit
IEEE 802.3at PoE+		Class 3 PD@12.9 watts	2 units
PSE		Class 2 PD@6.5 watts	2 units
		Class 1 PD@3.8 watts	2 units

#### Remarks:

- 1. The PoE output budget means the aggregated power output of the  $\ensuremath{\mathbf{2}}$
- 2. The aggregated power consumption will be below 30 watts if with 802.3at PoE+ PSE.

#### **Power over Ethernet Capability**

With different distance and different PoE input source, it will inflect the PoE output capability. Please refer to the table below.



### When PoE Switch (PSE) Output is DC 52V.

A (Distance)	B (Distance)	C (Watts)
60M	2M	28.8W
60M	20M	28 W
60M	60M	26.7W
60M	100M	25.3W
100M	2M	28.2W
100M	20M	27.3W
100M	60M	26.1W
100M	100M	24.7W

#### When PoE Switch (PSE) Output is DC 56V.

A (Distance)	B (Distance)	C (Watts)
60M	2M	29.7W
60M	20M	29.3W
60M	60M	28W
60M	100M	26.7W
100M	2M	29.5W
100M	20M	28.7W
100M	60M	27.4W
100M	100M	26.1W



The table list shown here is for your reference only. The actual performance should be related to your environment.

# 5. Product Specifications

Model	IPOE-E302	
Hardware Specifications		
Network	PoE in Port - 1 x 10/100/1000BASE-T Ethernet with IEEE 802.3bt PoE++ "Data + DC" in - Auto MDI/MDI-X, auto-negotiation RJ45 connector	
Connector	PoE out Port - 2 x 10/100/1000BASE-T Ethernet with IEEE 802.3at PoE+ "Data + DC" out - Auto MDI/MDI-X, auto-negotiation RJ45 connector	
Switch Architecture	Store-and-Forward switch architecture	
MAC Address Table	2K MAC address table with auto learning function	
Data Buffer	1Mbit	
Switch Fabric	6Gbps	
Switch Throughput	4.46Mpps @ 64Bytes	
Flow Control	IEEE 802.3x pause frame for full duplex Back pressure for half duplex	
Jumbo Frame	9Kbytes	
ESD Protection	Air 8KV DC Contact 6KV DC	
Surge Protection	6KV	
Enclosure	IP67-rated and IK10 aluminum metal case	
Installation	Wall-mount ear	





User's Manual

www.PLANET.com.tw

1-Port 802,3bt PoE++ to 2-Port 802,3at **Gigabit PoE Extender** 

► IP0E-E302

PLANET Technology Corp.

10F., No. 96, Minquan Rd., Xindian Dist., New Taipei City 231, Taiwan

Warning:
This device is compliant with Class A of CISPR 32.

The a providential equipment this device may cause radio interference. 2351-AH8070-000



Link/ACT LED x 3  150 x 43.8 x 72.94 mm (W x D x H) 169.85 x 43.8 x 72.94 mm (W x D x H), with cable gland  339g 372g (with three waterproof cable glands)  97 watts/331.6 BTU (Full loading with PoE function)  POE in Port  - IEEE 802.3bt PoE++ Type 4 standard PD - PoH (Power over HDBASE-T) PD - IEEE 802.3at PoE+ end-span/mid-span PD  POE POE out Port IEEE 802.3at PoE+ mid-span PSE  POE in Port
169.85 x 43.8 x 72.94 mm (W x D x H), with cable gland 339g 372g (with three waterproof cable glands) 97 watts/331.6 BTU (Full loading with PoE function)  POE in Port - IEEE 802.3bt PoE++ Type 4 standard PD - PoH (Power over HDBASE-T) PD - IEEE 802.3at PoE+ end-span/mid-span PD  Per PoE out Port IEEE 802.3at PoE+ mid-span PSE
97 watts/331.6 BTU (Full loading with PoE function)  POE in Port - IEEE 802.3bt PoE++ Type 4 standard PD - PoH (Power over HDBASE-T) PD - IEEE 802.3at PoE+ end-span/mid-span PD  Per PoE out Port IEEE 802.3at PoE+ mid-span PSE
POE in Port  - IEEE 802.3bt PoE++ Type 4 standard PD - PoH (Power over HDBASE-T) PD - IEEE 802.3at PoE+ end-span/mid-span PD  Per PoE out Port IEEE 802.3at PoE+ mid-span PSE
- IEEE 802.3bt PoE++ Type 4 standard PD - PoH (Power over HDBASE-T) PD - IEEE 802.3at PoE+ end-span/mid-span PD  Per PoE out Port IEEE 802.3at PoE+ mid-span PSE
- IEEE 802.3bt PoE++ Type 4 standard PD - PoH (Power over HDBASE-T) PD - IEEE 802.3at PoE+ end-span/mid-span PD  Per PoE out Port IEEE 802.3at PoE+ mid-span PSE
IEEE 802.3at PoE+ mid-span PSE
PoE in Port
50~57V DC, max. 95 watts 44~50V DC, max. 30 watts <b>Per PoE out Port</b> 48~56V DC, max. 30 watts
PoE in Port 1/2(-), 3/6(+), 4/5(+), 7/8(-) or 1/2(+), 3/6(-), 4/5(+), 7/8(-) Per PoE out Port 4/5(+), 7/8(-)
60 watts (max.) @ 802.3bt PoE++ Type 4 input 65 watts (max.) @ PoH input 30 watts (max.) @ IEEE 802.3at PoE+ input No support @ IEEE 802.3af PoE input
nce
FCC Part 15 Class A

Stability Testing	IEC 60068-2-32 (Free fall) IEC 60068-2-27 (Shock) IEC 60068-2-6 (Vibration)	
Standards Compliance	IEEE 802.3 Ethernet IEEE 802.3u Fast Ethernet IEEE 802.3ab Gigabit Ethernet IEEE 802.3x Flow Control IEEE 802.3af Power over Ethernet IEEE 802.3at Power over Ethernet Plus IEEE 802.3bt Power over Ethernet Plus Plus	
Environment		
Operating	Temperature: -40 ~ 75 degrees C Relative Humidity: 5 ~ 95% (non-condensing)	
Storage	Temperature: -40 ~ 85 degrees C Relative Humidity: 5 ~ 95% (non-condensing)	

# 6. Customer Support

Thank you for purchasing PLANET products. You can browse our online FAQ resource and user's manual on PLANET web site first to check if it could solve your issue. If you need more support information, please contact PLANET switch support team.

PLANET online FAQs:

http://www.planet.com.tw/en/support/faq.php?type=1

Switch support team mail address: support@planet.com.tw

Copyright © PLANET Technology Corp. 2020. Contents are subject to revision without prior notice.

PLANET is a registered trademark of PLANET Technology Corp. All other trademarks belong to their respective owners.

- 5 -- 6 -- 7 -- 8 -